

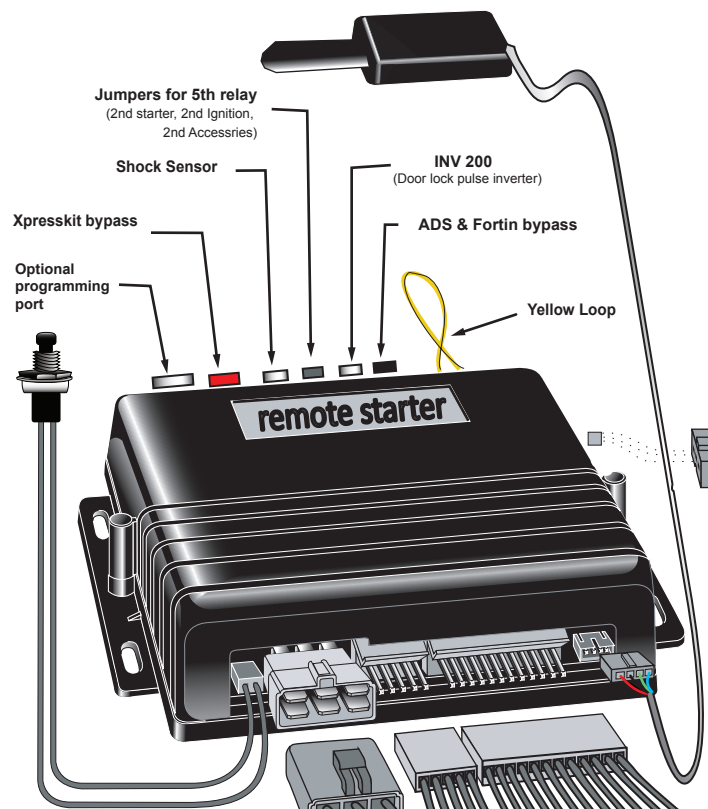
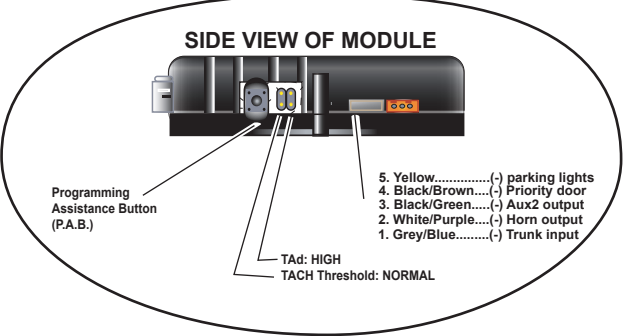


WIRING SCHEMATIC

For Automatic transmission:
Cut the yellow loop before plugging the module.

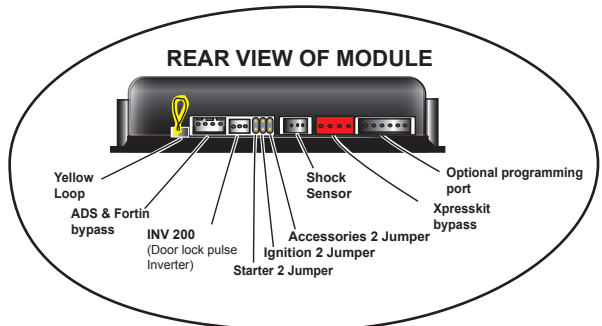

- 5. Yellow.....(-) parking lights output
- 4. Black/Brown.....(-) Priority door output
- 3. Black/Green.....(-) Aux2 output
- 2. White/Purple.....(-) Horn output
- 1. Grey/Blue.....(-) Trunk input

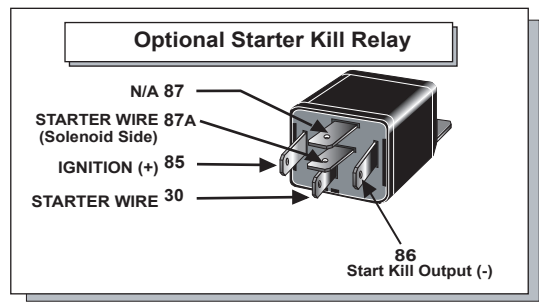

- YELLOW IGNITION
 - RED 12V (Battery)
 - ORANGE... ACCESSORIES (Heater Blower Motor)
 - PURPLE..... STARTER
 - GREEN 5th RELAY
 - RED +12V (Battery)
- 30 A Fuse
- 30 A Fuse
- 15 A Fuse

- 1- BLACK GROUND (-)
- 2- PURPLE..... TACH (AC)
- 3- GREY HOOD SWITCH (-)
- 4- ORANGE BRAKE SWITCH (+)
- 5- YELLOW PARKIN LIGHTS (+)

- 12- YELLOW (+) Glow plug input
- 11- GREY (-) NEG. Door input
- 10- WHITE (-) GROUND when running output
- 9- PURPLE (+) Siren output
- 8- ORANGE (-) Parking Brakes input
- 7- WHITE/ORANGE (-) Starter kill output
- 6- BLUE/WHITE (+) POS. Door input
- 5- WHITE/GREEN (-) DISARM output
- 4- WHITE/BROWN (-) REARM output
- 3- GREEN (-) UNLOCK output
- 2- BROWN (-) LOCK output
- 1- BLUE (-) TRUNK output